

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division  <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION Final Rev5
SUBJECT:  <b>HEPA FILTER VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE 1 OF 12

## Contents

- 1.0 Purpose & Scope**
- 2.0 Responsibilities**
- 3.0 Definitions**
- 4.0 Prerequisites**
- 5.0 Precautions**
- 6.0 Procedure**
- 7.0 Implementation and Training**
- 8.0 References**
- 9.0 Attachments**
- 10.0 Documentation**



**1.0 Purpose & Scope** This procedure provides standardization of the method used for the in-place efficiency testing of HEPA filters on portable vacuum cleaners at BNL. It also ensures the field tester safety from exposure to hazardous substances the vacuum cleaner has been used to collect.

High-efficiency particulate air (HEPA) filters are used on vacuum cleaners as air pollution control. Due to their general reliability and high level of performance, HEPA filters are commonly used to minimize the release of radioactive materials, asbestos, lead, beryllium, or other toxic particulates.

Filters that bear the marking “HEPA” are manufactured to remove  $\geq 99.97\%$  of the particles with a mean diameter of 0.3  $\mu\text{m}$  from an airstream. The manufacturer warrants the filter to meet these specifications. Upon installation into a vacuum cleaner, BNL policy is to test the installation of the filters. This phase of evaluation is known as “in-place” testing and is designed not only to validate the particle removal efficiency of the HEPA filter but also verify the integrity of associated seal, gasketing, and housing. Criteria for the acceptance of an in-place test is a particle removal efficiency of  $\geq 99.97\%$ , i.e. no measurable leakage around the filter and no defects in the filter media.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division	NUMBER <b>IH62350</b>
	REVISION Final Rev5
SUBJECT: <b>HEPA FILTER</b> <b>VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE <b>2 OF 12</b>

## 2.0 Responsibilities

- 2.1 This procedure will be implemented through the SHSD Industrial Hygiene Group at the request of the owner of the equipment.
- 2.2 Only persons who have demonstrated the competence by experience and training meeting the criteria set in IH62200 may perform this test.
- 2.3 The policy of the IH Group is to test equipment in accordance with the frequency requirements established in BNL Standard Based Management System Subject Areas and program descriptions or as requested by owners of equipment.

## 3.0 Definitions

*HEPA Filter:* A high efficiency particulate filter having a fibrous medium with a particle removal efficiency of at least 99.97% for 0.3-micron particles of Dioctyl Phthalate [or equivalent.]

## 4.0 Prerequisites

- 4.1 Prior to testing a HEPA filter system,
  - Verify the calibration and operability of the test equipment.
  - Verify the qualification of the personnel conducting the test
  - Check with the equipment owner and RCD Facility Support to determine the hazards associated from the material collected in the vacuum cleaner and the precautions needed to prevent exposure to the Tester.

## 5.0 Precautions

### 5.1 Prohibitions in testing:

- 5.1.1 Do not open the Vacuum cleaner without engineering controls in place to prevent contact with the debris contents of the vacuum.
- 5.1.2 Do not use Dioctyl Phthalate, (DOP) as the challenge agent.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division	NUMBER <b>IH62350</b>
	REVISION Final Rev5
<b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	DATE <b>06/01/07</b>
	PAGE <b>3 OF 12</b>
SUBJECT: <b>HEPA FILTER VACUUM CLEANER TESTING</b>	

5.2 **Hazard Determination:** The operation of this meter involves exposure to a low hazard chemical (test aerosol) that does not pose a high exposure risk. The meter design does not cause significant ergonomic concerns in routine use. The aerosol used in the generator would constitute Hazardous Waste if disposed on in bulk. The intended use of the aerosol as a test agent does not constitute a hazardous environmental emission.

By its very nature, a HEPA test may be done in areas where chemicals or radiation contamination is known or suspected to be present. Inhalation of these contaminants can have significant health effects. These hazards must receive a hazard evaluation by a cognizant ESH professional.

### 5.3 Personal Protective Equipment

5.3.1 Hand: Contact with aerosol liquid should be minimized but does not pose a significant health risk. Use of this meter in areas of known or suspected chemical or radiological contamination requires the use of disposable gloves. Exam-style, splash gloves are acceptable. Acceptable elastomers are: Nitrile, PVC, and Natural Rubber.

5.3.2 Body: If contact of the body with contaminated surfaces is anticipated, a disposable suit should be used. Acceptable CPC materials include: Tyvek®, KleenGuard®, and cotton. If contact with contamination has occurred for disposable garments, the garment must be disposed of as per EWMSD instruction. If contact with potentially contaminated surfaces is not expected, body covering is optional. However, if personal clothing items become contaminated, they must be surrendered for BNL cleaning or disposal.

5.3.3 Foot: If contact of the feet is anticipated with contaminated surface, disposable shoe coverings, boots or booties should be used. Acceptable CPC material include: Tyvek®, KleenGuard®, and rubber. If contact with contamination has occurred for disposable garments, the garment must be disposed of as per EWMSD instruction. If contact with potentially contaminated surfaces is not expected, shoe coverings are optional. However, if personal shoes become contaminated, they must be surrendered for BNL cleaning or disposal.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division	NUMBER <b>IH62350</b>
	REVISION Final Rev5
<b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	DATE <b>06/01/07</b>
	PAGE <b>4 OF 12</b>
SUBJECT: <b>HEPA FILTER VACUUM CLEANER TESTING</b>	

5.3.4 Respiratory: Under normal use, respiratory protection is not required. If chemical or radiological levels from contamination in the area exceed the OSHA, ACGIH, or DOE standards, respirators are required. A half face or full face APR or PAPR respirator with appropriate cartridge or an air line respirators may be used up to assigned protection factor listed in the BNL's Respiratory Protection Selection and Issuance SOPS.

5.3.5 Eye: Safety Glasses with side shields are required.

**5.4 Environmental Management and Waste Disposal:**

5.4.1 The operation converts the Emery 3004 into an aerosol with compressed air. In a test of a passing filter, the aerosol is trapped on the filter. In a system with a leaking filter, some or all of the aerosol is discharged to the environment up the exhaust stack. The concentration of aerosol in the exhaust air has negligible environmental consequences.

5.4.2 The Emery 3004 purchased by the IHG is used until it is all consumed in testing. If needed, the Emery 3004 is to be disposed of as a hazardous liquid via EWMSD.

5.5 **Job Risk Assessment:** Consult the *Job Risk Assessment* [SHSD-JRA-01](#) for the risk analysis of this operation based on the hazards and controls of this SOP.

**6.0 Procedure** Filter efficiency is determined by challenging a HEPA filter with an aerosol and measuring the aerosol concentration both upstream and downstream to calculate the percentage removed by the filter system. See Attachment 9.1 for a diagram of the system.

**Equipment:** Emery® 3004 or alternative (challenge agent)  
Aerosol generator  
Aerosol detector  
Sampling train (Tygon tubing and probes)  
Source of clean, medium-pressure air (e.g., 50-75 PSI)

**Test Protocol**

6.1 **Setup – Nucon® Aerosol Detector**

6.1.1 Open detector cover and plug in AC power cord.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division  <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION <b>Final Rev5</b>
SUBJECT:  <b>HEPA FILTER</b> <b>VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE <b>5 OF 12</b>

- 6.1.2 Turn on detector power switch, allow 5-10 min. warm-up. (Warm-up photometer in the “clear” mode until a stable baseline reading is obtained.)
- 6.1.3 Perform setup procedure as per Sec. 4.0 in the Nucon® Instrument manual.
- 6.1.4 Attach sample collection tubing to detector.
- 6.1.5 Self-calibrate and zero the instrument according to manufacturer’s procedures.

6.2 **Setup- Nucon® Generator**

- 6.2.1 Remove aerosol generator from carrying case.
- 6.2.2 Connect air pressure regulator and injection flex pipe.
- 6.2.3 Connect airline hose to regulator. (Attach the compressed air supply line (from house air system, compressed gas cylinder, or portable air compressor) to the generator inlet regulator. The concentration of the challenge aerosol is a function of both the delivered air pressure and the volume of air exhausted through the ventilation system. For typical laboratory fume hood HEPA systems (e.g., air flows of about 1000-5000 ft<sup>3</sup>/min), the aerosol generator inlet regulator pressure should be adjusted to about 25 PSI. For significantly larger or smaller systems, the inlet pressure will need to be adjusted with the second state regulator to provide at least a four order-of-magnitude difference between upstream (challenge) and downstream concentrations. Note that manufacturer’s specifications limit on the maximum operating pressure for the generator is less than 100 PSI.)

6.3 **Setup- HEPA vacuum cleaner**

- 6.3.1 Prior to testing vacuum cleaner, ensure that RCD FS personnel have checked the vacuum cleaner for surface radiation contamination.
- 6.3.2 Connect vacuum cleaner hose and power cord
- 6.3.3 Enclose top of vacuum cleaner in a large plastic bag and secure with duct tape.
- 6.3.4 Put 4-6 holes in the bag using a pen or pencil to sample the air inside the bag (vacuum cleaner exhaust). The holes will also prevent the bag from bursting when the unit is turned on.

6.4 **Testing**

- 6.4.1 Place Nucon® Aerosol Detector on cart and perform setup procedure.
- 6.4.2 Connect sampling lines to upstream and downstream ports.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division	NUMBER <b>IH62350</b>
	REVISION <b>Final Rev5</b>
SUBJECT: <b>HEPA FILTER VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE <b>6 OF 12</b>

- 6.4.3 Insert upstream probe into pre sampling port of the injection collection tube, which is mounted on the cart. Seal port with duct tape to prevent leaks.
  - 6.4.4 Insert flex injection pipe from aerosol generator into injection end of the injection collection tube, (do not seal end).
  - 6.4.5 Position the HEPA vacuum cleaner to be tested near the cart and insert vacuum cleaner hose into the output end of the injection collection tube. Seal plastic sleeve around the hose with duct tape.
  - 6.4.6 Connect airline supply hose to supplied air source (compressed gas cylinder, house air system, or portable air compressor. Adjust supplied air pressure to the aerosol generator to (40psi-100psi).
  - 6.4.7 Turn on HEPA vacuum cleaner to inflate the plastic bag. Run the vacuum cleaner for 1-2 minutes before testing to clear any dust from the motor to exit the bag.
  - 6.4.8 Turn on air supply to aerosol generator, adjust air pressure gage on the aerosol generator to approx. 5psi. Injecting the aerosol into the injection collection tube.
  - 6.4.9 Observe (pre) upstream reading on detector approx. 60 on the 10 range or 600. Enter data on the In-Place HEPA Filter Test Report form.
  - 6.4.10 Place the downstream probe inside the inflated plastic bag to sample air exhausted from the vacuum cleaner. Survey with the probe around the exhaust ports and seals.
  - 6.4.11 Measure upstream and downstream aerosol concentrations as follows:
    - 6.4.11.1 Measure upstream aerosol concentration
    - 6.4.11.2 Return to "clear" mode and re-zero instrument if necessary
    - 6.4.11.3 Measure downstream aerosol concentration
    - 6.4.11.4 Return to "clear" mode and re-zero instrument if necessary
    - 6.4.11.5 Repeat step 6.4 until sequential upstream and downstream readings are within  $\pm 5\%$  of their previous readings
  - 6.4.12 Record upstream and downstream concentrations. Enter data on the In-Place HEPA Filter Test Report form (see Attachment 9.3).
  - 6.4.13 Repeat Steps in 6.4 and record on the second entry line on the In-Place HEPA Filter Test Report form.
- 6.5 **Calculations:**
- 6.5.1 Calculate particle removal efficiency of the filter as follows:

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division  <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION Final Rev5
SUBJECT:  <b>HEPA FILTER VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE 7 OF 12

$$\text{Removal Efficiency (\%)} = \frac{C_u - C_d}{C_u} \times 100$$

Where:  $C_d$  = downstream aerosol concentration  
 $C_u$  = upstream aerosol concentration

6.5.2 Record data and findings on test report form (see Attachment 9.2).

Except where otherwise specified in the SBMS Subject Area *Exhaust Ventilation* or a system's operating specifications, the acceptable in-place HEPA filter removal efficiency result is  $\geq 99.97\%$ . Affix results sticker on the unit tested.

6.6 **Recordkeeping:**

- 6.6.1 Remove old HEPA filter test tag. Attach a new HEPA filter test tag on the vacuum cleaner
- 6.6.2 Provide a copy of the HEPA Filter Test Report to the ESH Coordinator, the Facility Support Representative and any other interested parties. The original test report will be retained by SHSD for 30 years.

6.7 **Waste Disposal:** Discard any un-used or used aerosol test liquid via the policy and procedures of the Waste Management Division. The liquid is a hazardous waste.

**7.0 Implementation and training**

- 7.1 *Complete the Level 1 Tester* qualification requirements as defined in the Section 7 *Implementation and Training* of SOP IH62200.
- 7.2 The re-qualification period is 3 year.

**8.0 References:**

- 8.1 IH SOP IH62300 *In-Place HEPA Filter Testing*
- 8.2 IH SOP IH62200, HEPA Filter Surveillance Program.
- 8.3 American National Standards Institute (ANSI). Standard ANSI N510, *Testing of Nuclear Air Treatment Systems*.

The only official copy is on-line at the SHSD IH Group website.  
 Before using a printed copy, verify that it is current by checking the document issue date on the website.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division  <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION <b>Final Rev5</b>
SUBJECT:  <b>HEPA FILTER</b>  <b>VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE <b>8 OF 12</b>

## 9.0 Attachments

- 9.1 Diagram of HEPA Test Apparatus
- 9.2 HEPA filter system test results sticker/tag.
- 9.3 BNL HEPA Filter Vacuum Cleaner Test Report

## 10.0 Documentation

Document Development and Revision Control Tracking		
PREPARED BY: <i>(signature/date on file)</i> R. Wilson Author Date 06/19/00	REVIEWED BY: <i>(signature/date on file)</i> R. Selvey Group Leader Date 06/23/00	APPROVED BY: <i>(signature/date on file)</i> R. Selvey IH Group Leader Date 06/23/00
ESH Coordinator/ Date:  <i>none</i>	Work Coordinator/ Date:  <i>none</i>	SHSD Manager / Date  <i>none</i>
QA Representative / Date: Rev 0 was a clone of IH-FP-6.1 that was reviewed by the DQAR	Training Coordinator / Date:  <i>none</i>	Filing Code:  <b>IH52</b>
Facility Support Rep. / Date:  <i>none</i>	Environ. Compliance Rep. / Date:  <i>none</i>	Effective Date:  <b>06/23/00</b>
ISM Review - Hazard Categorization <input type="checkbox"/> High <input checked="" type="checkbox"/> Moderate <input type="checkbox"/> Low/Skill of the craft	Validation: <input type="checkbox"/> Formal Walkthrough <input type="checkbox"/> Desk Top Review <input type="checkbox"/> SME Review Name / Date:	Implementation: Training Completed: Tracked in BTMS Procedure posted on Web: 06/01/07 Hard Copy files updated: 06/01/07 Document Control of forms: 06/01/07

Revision Log		
Purpose: <input type="checkbox"/> Temporary Change <input type="checkbox"/> Change in Scope <input checked="" type="checkbox"/> Periodic review <input type="checkbox"/> Clarify/enhance procedural controls		
Changed resulting from: <input type="checkbox"/> Environmental impacts <input type="checkbox"/> Federal, State and/or Local requirements <input type="checkbox"/> Corrective/preventive actions to non-conformances <input checked="" type="checkbox"/> none of the above		
Section/page and Description of change: Added SBMS Banner. Revised Precautions section adding Hazard Assessment, PPE, and Waste Disposal.		
<i>(signature/date on file)</i> Robert Selvey SME Reviewer/Date: 02/05/01	Reviewer/Date:	Reviewer/Date:


The only official copy is on-line at the SHSD IH Group website.  
 Before using a printed copy, verify that it is current by checking the document issue date on the website.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division  <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION <b>Final Rev5</b>
SUBJECT:  <b>HEPA FILTER</b>  <b>VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE <b>9 OF 12</b>

Purpose: <input type="checkbox"/> Temporary Change <input type="checkbox"/> Change in Scope <input type="checkbox"/> Periodic review <input type="checkbox"/> Clarify/enhance procedural controls Changed resulting from: <input type="checkbox"/> Environmental impacts <input type="checkbox"/> Federal, State and/or Local requirements <input type="checkbox"/> Corrective/preventive actions to non-conformances <input checked="" type="checkbox"/> none of the above Section/page and Description of change: Renumbered from IH-FP-6.2 to new system IH62350. Text reviewed, minor format changes made.		
<i>(signature/date on file) R. Selvey</i> SME Reviewer/Date: 03/09/01	SME Reviewer/Date:	SME Reviewer/Date:
Purpose: <input type="checkbox"/> Temporary Change <input type="checkbox"/> Change in Scope <input checked="" type="checkbox"/> Periodic review <input type="checkbox"/> Clarify/enhance procedural controls Changed resulting from: <input type="checkbox"/> Environmental impacts <input type="checkbox"/> Federal, State and/or Local requirements <input type="checkbox"/> Corrective/preventive actions to non-conformances <input checked="" type="checkbox"/> none of the above Section/page and Description of change: Revised to Section 7 Implementation and Training format. Minor revisions of text for agreement with IH62200 and IH62300.		
<i>(signature/date on file) R. Selvey</i> SME Reviewer/Date: 02/23/04	SME Reviewer/Date:	SME Reviewer/Date:
Purpose: <input type="checkbox"/> Temporary Change <input type="checkbox"/> Change in Scope <input checked="" type="checkbox"/> Periodic review <input type="checkbox"/> Clarify/enhance procedural controls Changed resulting from: <input type="checkbox"/> Environmental impacts <input type="checkbox"/> Federal, State and/or Local requirements <input type="checkbox"/> Corrective/preventive actions to non-conformances <input checked="" type="checkbox"/> none of the above Section/page and Description of change: Triennial Review. Format Change to Section 10. Text changes of minor nature to 5.3.3, 5.3.4, 6.2.3.1, and 7.1. Deleted Section 7.2. Deleted two definitions not needed.		
<i>(signature on file) R. Selvey 03/30/07</i> SME Reviewer/Date:	SME Reviewer/Date:	SME Reviewer/Date:
Purpose: <input type="checkbox"/> Temporary Change <input type="checkbox"/> Change in Scope <input type="checkbox"/> Periodic review <input checked="" type="checkbox"/> Clarify/enhance procedural controls Changed resulting from: <input type="checkbox"/> Environmental impacts <input type="checkbox"/> Federal, State and/or Local requirements <input type="checkbox"/> Corrective/preventive actions to non-conformances <input checked="" type="checkbox"/> none of the above Section/page and Description of change: Added Step 5.5 for JRA. Changed number format in Section 6. Reordered Attachments 9.2 and 9.3 to automate revision into new 9.2. Revised format of new 9.3, appearance only.		
<i>(signature on file) R. Selvey 06/01/07</i> SME Reviewer/Date:	SME Reviewer/Date:	SME Reviewer/Date:

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION Final Rev5
SUBJECT: <b>HEPA FILTER VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE <b>10 OF 12</b>

**Attachment 9.1**  
**Figure 1: Diagram of HEPA Test Apparatus**

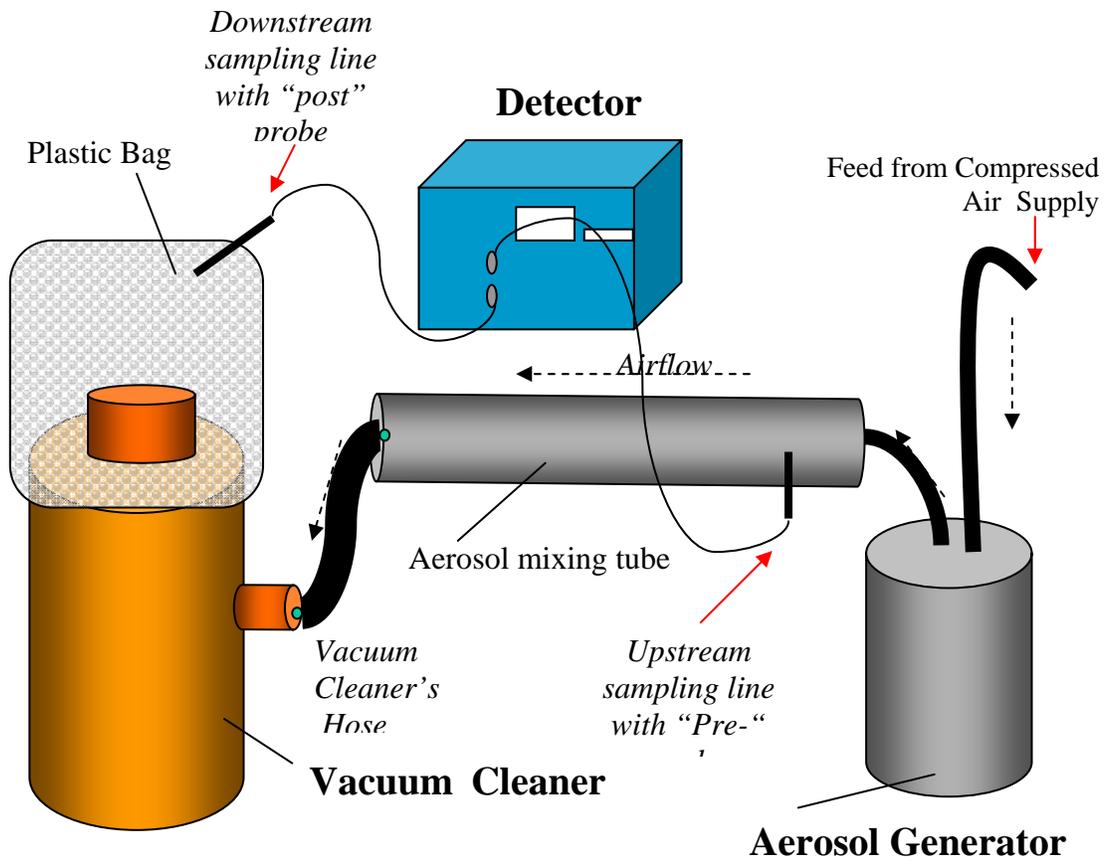

The only official copy is on-line at the SHSD IH Group website.  
Before using a printed copy, verify that it is current by checking the document issue date on the website.

<b>BROOKHAVEN NATIONAL LABORATORY</b> Safety & Health Services Division <b>INDUSTRIAL HYGIENE GROUP</b> Standard Operating Procedure	NUMBER <b>IH62350</b>
	REVISION Final Rev5
SUBJECT: <b>HEPA FILTER VACUUM CLEANER TESTING</b>	DATE <b>06/01/07</b>
	PAGE 11 OF 12

## ATTACHMENT 9.2

### HEPA Filter System Test Results Sticker/Tag

BNL - Safety & Health Services Division - Industrial Hygiene Group

**HEPA FILTER TEST: FAILED**  
Do NOT Use Vacuum Cleaner for Hazardous

Test by:

Unit ID:

BNL - Safety & Health Services Division - Industrial Hygiene Group

**HEPA Filter Test: PASSED**

Test by:

Unit ID:

## HEPA FILTER TEST REPORT VACUUM CLEANER

Building/Owner:	Date of Test:
System Type: <input type="checkbox"/> Vacuum Cleaner  <input type="checkbox"/> Portable Air Handler	Person(s) Performing Test:
Filter Site:  N/A	Signature of Lead Tester:

Aerosol: <u>Emery 3004</u>
Generator: <u>Nucon F1000-SN-10</u> Serial No. <input type="checkbox"/> <u>924SN1005392</u> <input type="checkbox"/> _____
Detector: <u>Nucon F1000-DDF</u> Serial No. <input type="checkbox"/> <u>924DDF4592</u> <input type="checkbox"/> _____

Vacuum Cleaner/Port Air Handler Unit ID	Upstream Reading	Downstream Reading	Removal Efficiency (%)	Comments

Entered into Database: \_\_\_\_\_ Date: \_\_\_\_\_ By: \_\_\_\_\_